

花园灯无线组网音箱

 
使用说明书

MZ-200A RGB



01 快速入门指南

1 包装清单

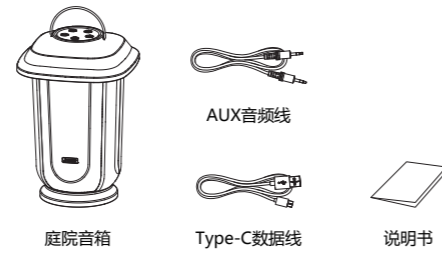


2 产品参数

输出功率: 20W	电池容量: 5200mAh
失真度: < 1%	待机时间: ≥300h
频率响应: 20Hz-20KHz	防水等级: IPX5
信噪比: ≥85dB	充电时间: 2-4小时
输入电压: DC 5V/2A	工作温度范围: 0°-40°
蓝牙版本: 5.0	工作湿度范围: 40-50%RH
辅助输入: 3.5mm	储存温度范围: -25°C-70°
无线距离: 15m Max	产品净重: 1380g(含电池)
工作时间: 灯光关闭情况下, 80%音量 可续航12.5小时	产品尺寸: W182×D182×H268mm

-01-

02 操作说明

 1 功能面板

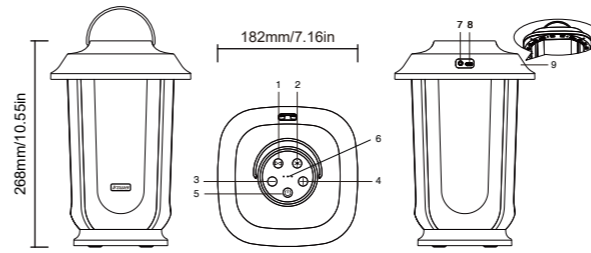

1. 组网键/同步
2. 灯光颜色切换/关闭
3. 音量减小
4. 音量增大
5. 电源开/关
6. 充电/蓝牙/组网 指示灯
7. 3.5MM音频插孔
8. Type-C插孔
9. LED RGB灯

2 音箱充电

- 注意:** 音箱在使用前必须充满电。
1. 打开橡胶盖, 然后将电源适配器插入充电插口。
 2. 将电源适配器插入电源插座。
 3. 充电时, 红色指示灯长亮; 当红色指示灯熄灭时为充满电。
(充满电大约要2-4个小时)

-02-



3 蓝牙配对

- (音箱必须打开电源)
- A. 建立新的连接**
1. 双击组网键 后蓝牙指示灯快速闪烁进入配对状态。
 2. 打开蓝牙设备搜索可用设备列表, 点击选择“MZ-200A”进行连接。
 3. 配对成功后, 蓝色指示灯将保持长亮状态, 并且会听到提示音。



-03-

B. 断开当前连接并与新设备配对

1. 设备配对成功后, 双击组网键 进入重新配对状态。
2. 重复上一节中的步骤1-3(建立新的配对)。

C. 从睡眠模式唤醒蓝牙

为了节省电量, 如果您的设备超出蓝牙范围(10m/ 393.70in)超过5分钟, 则蓝牙连接将自动进入睡眠模式。
要在设备回到范围内时重新连接, 请按电源键 以取消睡眠模式并重新建立配对连接。

注意: 配对时, 蓝牙设备和音箱应靠近(10m/ 393.70in)。
如果您无法配对设备, 则可能已将另一个设备与音箱配对。
请按照上面的B(与新设备断开并配对)中的步骤断开可能的连接。如果仍然难以配对设备, 请联系客户服务。

4 同步音箱

- 注意:** 仅当您有2个或更多蓝牙音箱时, 同步才有效。
(如果您没有同步任何音箱, 请参阅上面的“蓝牙配对”), 同步音箱需先同步后再进行蓝牙设备连接。
1. 先打开一个音箱。(TX主音箱)
 2. 打开其余音箱。(RX副音箱)
 3. 长按第一个音箱上的同步键 2秒, 直到黄/绿双色指示灯开始交替闪烁。
 4. 长按其余音箱上的同步键 2秒, 直到黄/绿双色指示灯开始交替闪烁。
 5. 机器连接后, TX主音箱长亮绿灯, RX副音箱长亮黄灯, 表示配对成功。
双击主音箱中的组网键, 让主音箱进入蓝牙配对状态(此时蓝牙指示灯快速闪烁)。将您的设备与主音箱进行蓝牙连接, 此时您就完成同步和蓝牙连接所有的操作。

-04-



如果您在同步音箱时遇到任何困难, 请参阅下面的“同步提示”。

 
同步提示

- 请阅读以下提示, 以增强您的多同步体验!**
1. 在设置过程中, 同步信号只传输90秒。
如果您未在90秒内完成1-4步的步骤, 则您尝试与之同步的音箱将在90秒后不同步。如果您需要90秒以上的时间来完成同步过程, 只需再次按第一个音箱上的同步键 以重新激活同步信号(上一节中的第4步: 同步音箱), 然后继续同步更多的音箱。
 2. 当需要再次打开所有先前已经同步过的音箱时, 我们建议先打开主音箱的电源, 再打开副音箱。
当您同步音箱时, 它们会保持同步。即使您关闭了同步音箱的电源, 它们也会在通电后再次自动进行同步的。因此您应该先打开TX主音箱。
 3. 选择主音箱的位置。
当您关闭TX主音箱(第一个音箱)的电源时, 重新同步的RX副音箱也将关闭。因此, 请将TX主音箱放置在方便的位置, 以便您轻松地打开和关闭它。

-05-

5 AUX 输入

- 音箱附带3.5mm音频线, 您可以使用不带蓝牙的音箱。在这种情况下, 蓝牙将被禁用, 但是音箱同步功能仍然可以正常使用。
1. 将音频线的一端插入音箱AUX接口。
 2. 将音频线的另一端插入设备的音频插孔。
(确保音频插孔不受任何保护套或附件的阻挡)
 3. 将音频线插入音箱后, 您会听到一声蜂鸣声, 并且红色指示灯将亮起。

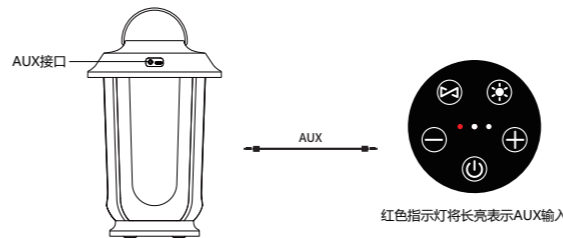

注意: 如遇死机无法操作时, 请用小于3MM长于30MM的小螺丝批捅AUX插孔的底部顶一下按键整机会断电复位。

6 灯光显示

- 注意:** 渐变变色功能仅在播放音乐时有效。
- 灯光显示颜色选择**
灯光功能必须打开才能更改灯光显示颜色, 单按 依次为红色, 深蓝, 浅蓝, 琥珀色, 绿色, 粉色, 紫色, 白色, 渐变变色循环。
注意: 开机默认为自动变色闪烁, 蓝牙无连接时灯光默认为定时2H自动关灯。

-06-

保修卡

产品型号	购买日期
经销商	用户姓名
联系电话	电子邮件
用户地址	

保修记录

用户姓名	故障描述	维修日期	维修人员签字



Garden Light Wireless Speaker

 
User's Manual

MZ-200A RGB



01 Quick start guide

1 Packing list

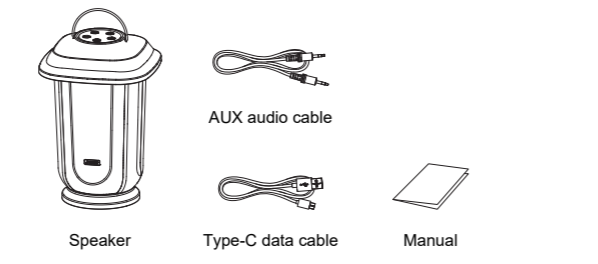


2 Product parameter

Output power: 20W	Battery capacity: 5200mAh
Distortion: <1%	Standby time: ≥300h
Frequency response: 20Hz-20KHz	Waterproof rating: IPX5
Signal to noise ratio: ≥85dB	Charging time: 2-4 hours
Input voltage: DC 5V/2A	Operating temperature range: 0°-40°
Bluetooth version: 5.0	Working humidity range: 40-50%RH
Auxiliary input: 3.5mm	Storage temperature range: -25°C-70°
Wireless distance: 49ft/15m Max	Product net weight: 1380g(including battery)
Working time: 12.5 hours at 80% volume with lights off	Product size: W182×D182×H268mm

02 Instructions

 1 Function panel

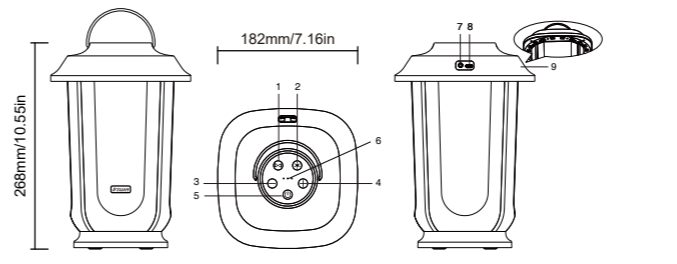


1. Network key/synchronization
2. Light color switch/off
3. Volume down
4. Volume up
5. Power on/off
6. Charging/Bluetooth/Networking indicator
7. 3.5MM audio jack
8. Type-C port
9. LED RGB light

2 Speaker charging

Note: The speaker must be fully charged before use.

 1. Open the rubber cover, and then insert the power cable into charging port.
2. Plug the power adapter into the power socket.
3. When charging, the red indicator light is on; when the red indicator light is off, it is fully charged.(It takes about 2-4 hours to fully charge)

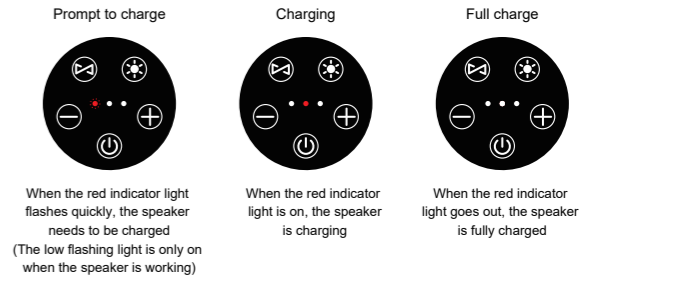


3 Bluetooth pairing

(The speaker must be powered on)

A. Establish a new connection

 1. After double-clicking the networking button "⌂", the Bluetooth indicator flashes quickly to enter the Bluetooth pairing state.
2. Open the Bluetooth device search list of available devices, click to select "MZ-200A" to connect.
3. After the pairing is successful, the blue indicator light will stay on constantly and a beep will be heard.

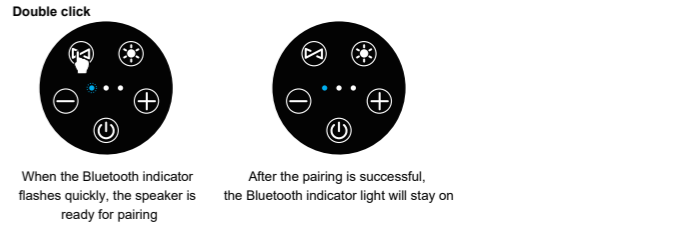

B. Disconnect current connection and pair with new device

1. After the devices are paired successfully, double-click the networking button "⌂" to enter the re-pairing state.
2. Repeat steps 1-3 in the previous section (to establish a new pairing).

C. Wake up Bluetooth from sleep mode

To save power, if your device is out of the Bluetooth range (10m/ 39.37in) for more than 5 minutes, the Bluetooth connection will automatically enter sleep mode. To reconnect when the device is back in range, press the power key "⏻" to cancel the sleep mode and re-establish the pairing connection.

Note: When pairing, the Bluetooth device and the speaker should be close (10m/ 39.37in).

 
If you can't pair the device, you may have paired another device with the speaker. Please follow the steps in B (disconnect and pair with the new device) above to disconnect the possible connection. If it is still difficult to pair the device, please contact customer service.

4 Synchronous speakers

Note: The synchronization is only valid when you have 2 or more Bluetooth speakers.

The synchronized speakers need to be synchronized before connecting to the Bluetooth device.

1. First turn on a speaker. (We call it main speaker)
2. Turn on the remaining speakers. (We call it aux. speaker)
3. Press the sync button "⌂" on the main speaker for 2 seconds until the yellow/green two-color indicator light starts to flash alternately.
4. Press the sync button "⌂" on the aux. speakers for 2 seconds until the yellow/green two-color indicator lights start to flash alternately.
5. After the sync is completed, the main speaker keeps green light on, and the aux. speakers keeps yellow light on, indicating that the pairing is successful.
6. Double the network key in the main speaker to let its bluetooth prepare for pairing(now Bluetooth blue light quickly flash). Connect your device with the speaker, now you can enjoy the music with all speakers synchronously.

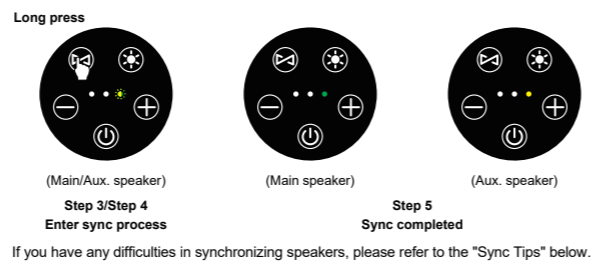

If you have any difficulties in synchronizing speakers, please refer to the "Sync Tips" below.

Synchronization tips

Please read the following tips to enhance your multi-sync experience!

1. During the setting process, the synchronization signal is only transmitted for 90 seconds.

If you do not complete steps 1-4 within 90 seconds, the speaker you are trying to synchronize will not be synchronized after 90 seconds. If you need more than 90 seconds to complete the synchronization process, just press the sync button "⌂" on the first speaker again to reactivate the sync signal (Step 4: Synchronize the speakers in the previous section), and then continue Synchronize more speakers.

2. When turning on previously synced speakers, we recommend power on the main speaker first.

When you sync the speakers, they stay in sync. Even if you turn off the power of the synchronized speakers, they will automatically synchronize again after the power is turned on. So you should turn on the TX main speaker first.

 
3. Select the location of the main speaker.

When you turn off the power of the TX main speaker (the first speaker), the resynchronized RX receiver will also be turned off. Therefore, please place the TX main speaker in a convenient location so that you can easily turn it on and off.

5 AUX input

The speaker comes with a 3.5mm audio cable, you can use the speaker without Bluetooth. In this case, Bluetooth will be disabled, but the speaker synchronization function can still be used normally.

1. Insert one end of the audio cable into the speaker AUX interface.
2. Insert the other end of the audio cable into the audio jack of the device. (Ensure that the audio jack is not blocked by any protective sleeves or accessories)
3. After inserting the audio cable into the speaker, you will hear a beep and the red indicator light will light up.

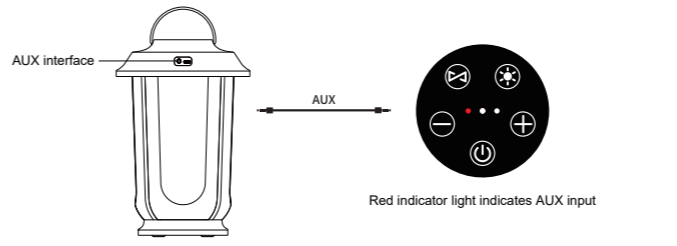

Reset: In case of unable to operate speaker, please use a small screwdriver smaller than 3mm and longer than 30mm to poke the bottom of the AUX jack and press the button, the speaker will be powered off and reset.

6 Light display

The light function must be turned on to change the light display color, single press "★" in order to red, dark blue, light blue, amber, green, pink, purple, white, beat-driven color cycle.

Note: The default is to automatically change the color of the flashing light when it is turned on. When the Bluetooth is not connected, the light is defaulted to automatically turn off the light at regular 2H.

7 Support information

Need further help, you can contact us by

- A. Service E-mail: inwa_support@innosystemtech.com
- B. Or contact us on Amazon
1. Go to Your Orders.
 2. Find your order in the list.
 3. Select Problem with order.
 4. Choose your topic from list displayed. Select Contact seller.

UK	REP	GOAL REACH CONSULTING LTD OFFICE 1029 3 HARDMAN STREET 10TH FLOOR, SPINNINGFIELDS MANCHESTER, UK M3 3HF
----	-----	--

OST_UK_20230424000006 goalservice@hotmail.com
We simply act as UK representative for cross-border sellers, and are not manufacturers/importers/distributors for the product, nor involved in the manufacture/import/sale of the product. Therefore, we are not responsible for any after-sales services related to the product. In case of any product quality or infringement issues, the manufacturer/importer/seller shall be solely held responsible.

EU	REP	SUCCESS COURIER SL CALLE RIO TORMES NUM.1, PLANTA 1, DERECHA , OFICINA 3, Fuenlabrada, Madrid,28947 Spain
----	-----	--

OST_EU_20230424000022 successservice2@hotmail.com
We simply act as EU representative for cross-border sellers, and are not manufacturers/importers/distributors for the product, nor involved in the manufacture/import/sale of the product. Therefore, we are not responsible for any after-sales services related to the product. In case of any product quality or infringement issues, the manufacturer/importer/seller shall be solely held responsible.