

MZ-368 骑行速显音箱

感谢您购买本产品。使用蓝牙音箱前，请阅读所有安全信息和操作说明。

安全须知

- 阅读所有说明，并保存起来以备日后参考。
- 请遵循产品操作的所有说明。
- 请勿将其放置在热源附近。避免使用散热器，火炉和其他会发热的设备。避免长期暴露在阳光和高温下。
- 此音箱有5种模式：BT/AUX/TF/CLOCK/骑行模式。
- 请注意：音箱连接状态暂停播放不会进入休眠关机状态，断开连接状态持续10分钟会进入CLOCK模式。

☺ 扫描二维码下载APP，骑行模式可显示时速



iOS APP




安卓 APP 国内版




安卓 APP 国外版

产品描述

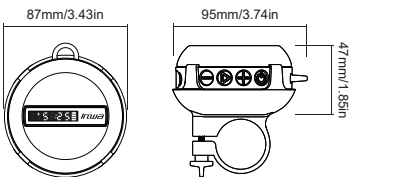


控制面板和界面

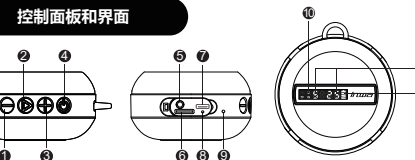

- ① -：降低音量/上一曲：长按按钮音量减。短按按钮上一首（BT模式和TF卡模式下有效）。
- ② ▷：播放/暂停/配对：在音箱蓝牙连接状态，或TF卡模式下，短按此按钮可以播放/暂停；在音箱蓝牙连接状态下，连续短按2次强制断开当前连接，进入蓝牙搜索配对状态；长按按钮2秒进入时钟设置模式。
- ③ +：增加音量/下一曲：长按按钮音量加。短按按钮下一首（BT模式和TF卡模式下有效）。
- ④ ⏻：电源开/关/模式：关机状态长按2秒开机；开机状态长按2秒关机；开机状态短按此按钮切换模式。
- ⑤ AUX输入接口 ⑥ SD卡接口
- ⑦ 电源接口：DC 5V 1A ⑧ 电源/充电指示灯（红灯）
- ⑨ 麦克风 ⑩ BT/TF/LINE IN指示灯
- ⑪ 时速/时钟 ⑫ 电池符号

显示屏的显示方式

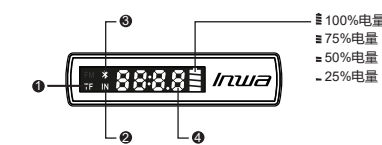

- ① 在SD卡模式时，TF图标为长亮 ② 在LINE IN模式时，IN图标为长亮
- ③ 在BT蓝牙模式时，BT图标配对与回连为快闪，连接上为长亮
- ④ 88.8.8为状态显示：默认显示24H制时钟，在APP界面添加蓝牙设备后会自动同步校准时钟，长按“▷”2秒进入手动时钟设置模式，单按为分钟/小时的慢闪切换，并配合“+”“-”设置分钟/小时，再单按“▷”确认。

产品参数

- 工作时长：60%音量连续工作10小时
- 待机时长：≥300小时
- 蓝牙范围：≤10m
- 频率响应：20HZ-20KHZ
- 蓝牙版本：V5.3
- 充电时长：2.5-3小时
- 工作电压：5V/1A
- 额定功率：5W
- 防水等级：IP65
- 电池容量：800mAh

 
包装内容

- MZ-368主机 X1
- 自行车支架 X1
- 0.6m USB充电线 X1
- 夹扣 X1
- 说明书 X1

操作指令

• 步骤1

长按电源按钮2秒，开机，有开机提示音，开机后，显示屏会亮起，音箱进入与手机蓝牙搜索配对状态并恢复关机前所设置的音量。




注意：

- A.当音箱插入TF卡时进行关/开机，不会优先进入TF卡模式。
- B.当音箱关闭且连接了音频线时，打开音箱后，音箱将首先进入AUX模式。若要切换至BT模式，您可以短按电源按钮，音箱可切换至BT模式，并进入配对状态。
- C.当音箱关闭时，未插入TF卡且未连接音频线时，音箱将在打开后直接进入BT模式。
- D.当音箱打开时，音箱将进入与最后连接的输入（TF卡或音频电缆）相对应的模式。若要切换至BT模式，您可以短按电源按钮，音箱可切换至BT模式，并进入配对状态。

• 步骤2

打开手机或其他蓝牙设备上的蓝牙功能，然后搜索名为INWA368的音箱。与音箱连接。

- 1.在手机上搜索INWA368音箱；
- 2.连接INWA368音箱；
- 3.选择通过INWA368音箱播放音乐。

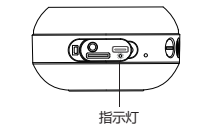

指示灯

• 步骤3

配对成功后，会有提示音，显示屏上的“* ”标识会常亮。

• 步骤4

如何将音箱与新设备连接：
将音箱与设备连接时，您可以短按2次播放/暂停/配对按钮以切断当前连接并进入配对状态，显示屏上的“* ”标识会闪烁。



蓝牙装置

注意：

开机默认为蓝牙状态进入回连或等待连接状态，无连接10分钟进入低功耗时钟显示模式。

支架安装指南

• 步骤1

如图1所示，按下支架的凸起部分，取出音箱，然后再安装支架。

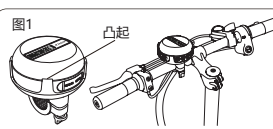


图1

• 步骤2

如图2所示，从支架上拧下螺钉。


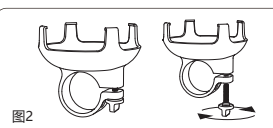


图2

• 步骤3

将防滑垫1放入支架的环中，将支架通过环固定到自行车上，然后用在步骤2中取出的螺钉拧紧支架。

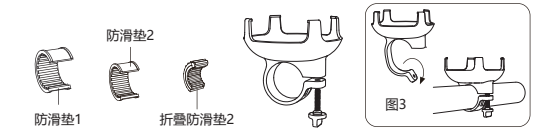

注意：

如果转向轴太细且不能仅用1个防滑垫固定，则可以将垫1和2放入环中，使转向轴穿过环，然后用螺钉拧紧支架。如果支架仍然松动，则可以折叠防滑垫2，然后将防滑垫1和折叠垫2放入环中，使转向轴穿过环，然后用螺钉拧紧支架。

• 步骤4

安装支架后，您可以将音箱推入支架。听到咔哒声后，音箱就安装好了。

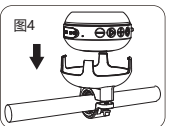


图4

蓝牙音箱连接记忆功能

如果设备蓝牙功能开启，打开音箱后，音箱将自动连接到最后一个配对设备。

蓝牙音箱通话功能

- 接听电话：当音箱与手机连接时，如果有来电，您可以短按播放/暂停按钮即可接听。
- 挂断电话：当音箱与手机连接时，通话中您可以短按播放/暂停按钮即可挂断。
- 拒绝通话：当音箱与手机连接时，您可以通过长按播放/暂停按钮来拒绝来电。

骑行模式

使用前先扫描二维码，下载 INWA APP，蓝牙连接成功后打开APP，并在APP设置里面手动添加名称为“INWA368”的设备，只有在APP里手动添加音箱设备后，音箱显示屏才会进入骑行显示模式，并显示您的时速。




88.8.8显示S-0~120

S为速度
0~120为时速
时速以每1秒钟刷新时速显示

当手机APP连接上音箱时自动切换到时速显示模式88.8.8只显示时速，S慢闪，手机静止与运动时显示0~120KM时速。当时速达到S 120时，显示屏与APP界面时速表同时快闪并提示注意降低速度。当音箱在骑行模式下速度显示，要切换时钟显示按下电源按钮“⏻”。

AUX模式

 通过AUX端口插入3.5mm音频线，以切换AUX模式。您可以按电源按钮进行模式切换。



在AUX模式下，播放音乐时，显示屏上的“IN”标识会常亮。

温馨提示：
3.5mm音频线不在配件范围。

TF卡模式

插入SD卡后，音箱将进入TF卡模式，您可以短按电源按钮进入模式切换。

在TF卡模式下，当播放音乐时，显示屏上的“TF”标识会常亮。

注意：

充电指示灯充电时，红色指示灯将常亮，并且在音箱充满电后将熄灭。

保修卡

产品型号	购买日期
经销商	用户姓名
联系电话	电子邮件
用户地址	

保修记录

用户姓名	故障描述	维修日期	维修人员签字

合格证

日期：_____

检验员：_____

MZ-368 Riding speed display speaker

Thank you for buying this product. Please read all safety information and operation instruction before using the bluetooth speaker.


SAFETY INSTRUCTIONS

- Read all instructions and save them for personal reference in the future.
- Follow all directions for operating the product.
- Do not set up near heat sources. Avoid radiators, stoves, and other devices that produce heat. Avoid long-term exposure to sunlight and high temperatures.
- This speaker has 5 modes: BT/AUX/TF/CLOCK/riding mode.
- Please note: when the speaker is connected, it will not enter the dormant shutdown state when the speaker is paused, and it will enter the CLOCK mode when the speaker is disconnected for 10 minutes.


PACKAGE CONTENTS

- | | | | |
|-------------------------------|----|-----------------|----|
| • MZ-368 speaker | X1 | • Speaker clips | X1 |
| • Speaker holder for bicycles | X1 | • Manual | X1 |
| • 0.6m usb charging cable | X1 | | |

PRODUCT DESCRIPTION

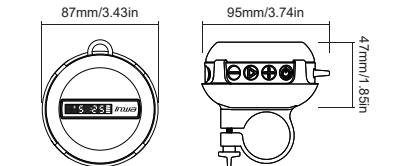


CONTROL PANEL AND INTERFACE

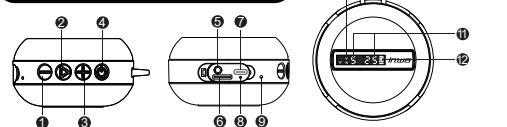

- 1 - : Decrease volume/previous song: Long press the button to decrease the volume. Short press the button to the previous song (valid in BT mode and TF card mode).
- 2 ▷ : Play/pause/pair: In the speaker Bluetooth connection state, or in the TF card mode, short press this button to play/pause; in the speaker Bluetooth connection state, short press twice to forcefully disconnect the current connection and enter the Bluetooth search pairing state ; Long press the button for 2 seconds to enter the clock setting mode.
- 3 + : Increase the volume/Next song: Long press the button to increase the volume. Short press the button to next song (valid in BT mode and TF card mode).
- 4 ⏻ : Power on/off/mode: press and hold for 2 seconds to turn on when off state; press and hold for 2 seconds to turn off when on state; short press this button to switch mode when on state.
- 5 AUX input interface
- 6 SD card interface

- 7 Power interface: DC 5V 1A
- 8 Power/charge indicator (red light)
- 9 Microphone
- 10 BT/TF/LINE IN indicator
- 11 Speed/clock
- 12 Battery symbol

Display mode of the display

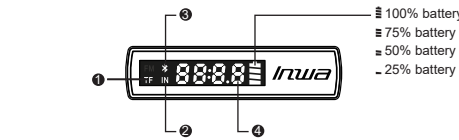

- 1 In SD card mode, the TF icon is always on
- 2 In LINE IN mode, the IN icon is always on
- 3 In the BT Bluetooth mode, the BT icon pairing and back-connecting will flash quickly, and the connection will be solid.
- 4 88:8.8 is the status display:
The 24H clock is displayed by default. After adding a bluetooth device on the APP interface, the clock will be automatically synchronized and calibrated. Press and hold "▷" for 2 seconds to enter the manual clock setting mode, and a single press is a slow flash switch of minutes/hours, and cooperate with "+" "-" to set the minutes/hours, and then single-press "▷" to confirm.

 
PRODUCT PARAMETERS

- Working hours: 10h battery life at 60% volume
- Standby time: ≥300 hours
- Bluetooth range: ≤10m
- Frequency: 20HZ-20KHZ
- Bluetooth version: V5.3
- Charging time: 2.5-3 hours
- Working voltage: 5V/1A
- Rated power: 5W
- IP rating: IP65
- Battery capacity: 800mAh

OPERATION INSTRUCTION

• Step 1


Press and hold the power button for 2 seconds to turn it on, and there will be a power on prompt sound. After power-on, the display will light up, and the speaker will enter the Bluetooth search and pairing state with the mobile phone and restore the volume set before turning off.



• Step 2

Turn on the Bluetooth function on your phone or other Bluetooth devices and search for our speaker which is named as MZ368. Connect with the speaker.

1. Search for MZ368 Speaker on your phone;
2. Connect with MZ368 Speaker;
3. Select playing music via MZ368 Speaker.

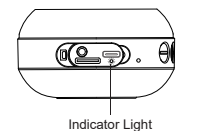


• Step 3

After the pairing is successful, there will be a beep and the " * " logo on the display will be on.

• Step 4

 
How to connect speakers with new equipment: When connecting the speaker to the device, you can short press the play/pause/pairing button twice to cut off the current connection and enter the pairing state. The " * " logo on the display will flash.



INSTALLATION GUIDE OF HOLDER


• Step 1

As picture 1 shows, pressing the claw of the holder, takeout the speaker before installing the holder.

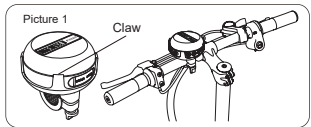

• Step 2

As picture 2 shows, screw out the screws from the holder.

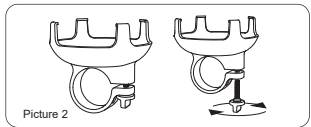

• Step 3

Put the non-slip mat 1 into the ring of the holder, fix the holder onto the bike through the ring, and tighten the holder with screw which has been taken out in step 2.



CONNECTION MEMORY FUNCTION OF THE SPEAKER

The speaker will automatically connect to the last paired device, in case that BT function of the device is on, after turning the speaker on.

TEL FUNCTION OF THE SPEAKER


- Pick up Phone Call: When the speaker is connected with phone, in case of a coming call, you can pick up the call by short pressing the PLAY/PAUSE button.
- Hang UP: When the speaker is connected with the phone, you can hang up by short pressing the PLAY/PAUSE button.
- Reject a Call: When the speaker is connected with the phone, you can reject a call by long pressing the PLAY/PAUSE button.



RIDING MODE



1. To get started, scan the QR code and download the Inwa APP.
2. Once connected via Bluetooth, manually add the "INWA368" device in the APP settings. This will enable the speaker screen to enter cycling display mode and show your speed.

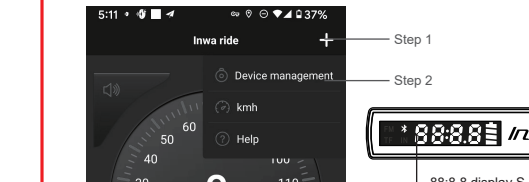

After connecting via Bluetooth and adding the device in the Inwa APP, it will automatically switch to the speed display mode. The first letter on the display is "S", indicating that it is in speed mode, and the number displayed after "S" represents your current speed.
Tip 1. You can choose your speed unit (km/h or mph) in the Inwa APP.
Tip 2. You can choose to turn off the speed voice prompt in the Inwa APP.
When the speaker displays the speed in the riding mode, press the power button "⏻" to switch the clock display.

AUX MODE

Insert 3.5MM LINE IN cable via the AUX port to swift to the AUX Mode. You can press the Power Button to swift modes.



In AUX mode, when playing music, the "IN" logo on the display will always be on.
Tips:
The 3.5mm audio cable is not in the scope of accessories.

TF CARD MODE

The speaker will enter TF Card Mode after inserting SD card, and you can short press the Power Button to swift modes.

In TF card mode, when playing music, the "TF" logo on the display will always light up.

Notice:

When the charging indicator is charging, the red indicator light will be steady on and will go out when the speaker is fully charged.

SUPPORT INFORMATION

Need further help, you can contact us by
Service E-mail: inwa_support@innosystemtech.com



GOAL REACH CONSULTING LTD
OFFICE 1029 3 HARDMAN STREET 10TH
FLOOR, SPINNINGFIELDS MANCHESTER,
UK M3 3HF

OST UK 20230424000006 goalservice@hotmail.com

We simply act as UK representative for cross-border sellers, and are not manufacturers/importers/distributors for the product, nor involved in the manufacture/import/sale of the product.

Therefore, we are not responsible for any after-sales services related to the product. In case of any product quality or infringement issues, the manufacturer/importer/seller shall be solely held responsible.



SUCCESS COURIER SL
CALLE RIO TORMES NUM.1, PLANTA 1,
DERECHA , OFICINA 3, Fuenlabrada,
Madrid,28947 Spain

OST_EU_20230424000022 successservice2@hotmail.com

We simply act as EU representative for cross-border sellers, and are not manufacturers/importers/distributors for the product, nor involved in the manufacture/import/sale of the product.

Therefore, we are not responsible for any after-sales services related to the product. In case of any product quality or infringement issues, the manufacturer/importer/seller shall be solely held responsible.