MZ-511 无线组网音箱

MZ-511

中文/

产品手册


无线组网音箱

感谢您购买此产品。 在使用无线音箱之前,请阅读所有安全信息 和操作说明。


### 安全守则

- 请阅读并遵循本说明。
- 请在室温下保存或使用。
- •请勿在热源附近使用本产品,如散热器、焓调节器、火炉或其他发热 仪器(包括放大器)。
- 各类故障均应由专业维修人员进行维修,擅自拆卸将导致保修失效。

中文/ 包装内容

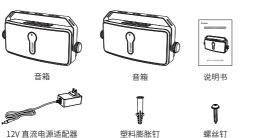

产品描述

 

# 产品参数

蓝牙版本: 5.0 无线距离: ≤15M 输入电压: DC12V/2A 20W < 0.1% 20Hz-20KHz >80dB IPX5

## 控制面板和界面



2.音量+/下一曲键: 短按下一曲,长按音量+。

3.播放/暂停键: 短按播放暂停。

4. 音量-/上一曲键:短按上一曲,长按音量-。 5.电源线接口 6. 旋钮 7. 支架

中文/\_\_

自动组网模式。

# 操作指令

接上电源,音箱会自动开机,有提示音,进入配对状态。 步骤2

中文/\_\_

首次组网配对方法:

必须先选择一个音箱连上手机作为主机(不播放音乐),然后从机会自 动连上主机长亮红灯,具有记忆功能,下次开机手机连上蓝牙后从机会 自动连接主机。

 


中文/ \*断开组网模式方法:两台或多台音箱连接成功后,长按任一从机音箱

的组网键2秒至蓝灯快闪即解除组网模式,再长按2秒至红灯快闪进入



播放音乐时,主机蓝灯慢闪,从机红灯长亮。



中文/

蓝牙连接与断开手机连接方式:

音箱连接蓝牙状态下,双击组网键至蓝灯快闪,然后打开手机蓝牙功能, 搜索蓝牙音箱的名称: MZ-511, 然后点击连接音箱, 连上音箱后蓝灯长



### 步骤4



# 安装步骤

1.安装前请确认音箱能正常工作。 2.图A中的工具不包括在内。

从产品上拆下支架,按照间距在 墙上钻两个安装孔(见图A)。

使用附件中的螺钉将支架拧入墙



中文/

### 保修记录

壁上的安装孔。

将音箱安装在支架上,将其调整 到您想要的角度并拧紧螺丝。



# 保修卡

产品型号

用户姓名 维修人员签字

购买日期

用户姓名

电子邮件

检验员:\_\_\_\_\_

MZ-511 Wireless Networking Speaker

English/ Product Manual

# MZ-511 Wireless Networking Speaker

Thank you for buying this product. Please read all safety information and operation instruction before using the bluetooth speaker.

### SAFETY INSTRUCTIONS ,

 
- Please read and follow this instruction.
- Please keep or use at room temperature.
- Please do not use this product near heat sources such as radiators. enthalpy regulators, stoves or other heat generating instruments (including amplifiers).
- All types of malfunction should be repaired by professional maintenance staff, disassemble without permission will void the warranty.

# English/ PACKAGE CONTENTS Speaker User manual Plastic Expansion Screw Power Adapter DIMENSIONS $\overline{\phantom{a}}$ 195mm/7.69in 54mm/2.13in

# English/

### PARAMETER

Bluetooth version: Wireless distance: ≤15M DC12V/2A Input voltage: 20W < 0.1% 20Hz-20KHz Frequency range: Waterproof level:




- 3. Play/Pause key: Short press to pause the play.

OPERATION INSTRUCTION ,

Bluetooth

Bluetooth connection with one speaker: Power on the speaker via connect to the power supply, the blue indicator flashes. Turn on the mobile phone Bluetooth to search for "MZ-511" and connect with it. Bluetooth can only be connected when the blue indicator flashes)

### SPEAKER CONTROL PANEL AND PORTS

 


# 1. Networking Key: Long press for 2 seconds switch to the Main or Aux.

- 2. Volume +/ Next track Button: short press the next track, long press
- 4. Volume-/Previous Button: short press the previous song, long press
- 5. Power cord port 6. Knob 7. Bracket

# English/

and they will auto pair with the Main speaker when their indicator lights are in red. (Note: If the indicator of Aux. speaker does not show red after they

(Note: If the red indicator flashes after the speaker powered on, long press the networking key to switch to the blue indicator flashing. Blue light is always on

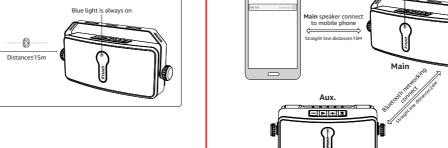

\*Disconenct network mode method: After two of more speakers are sucessfully connected. Long press the networking key for any Aux. speaker until the blue light flashs quickly to disconnect the Aux. speaker from network mode.

### Network pairing with Multiple speakers:

### After finish with step 1, you have Bluetooth connected one speaker

(Main) with your mobile phone, power on the other speakers(Aux.).

English/

powered on, Please long press the networking key to switch to red)



# INSTALLATION DIAGRAM

### 1 Please confirm the speaker can

English/

Main

The blue light flashes quickly to cancel the network

When multiple speakers successfully enter the networking mode, the

Aux. machine red light is always on

blue indicator light of the Main speaker flashes slowly, and the red

indicator light of the Aux. speakers are always on.

The blue light of the Main unit

flashes slowly

- work normally before installing.
- 2. Tools in Figure A are not included.

Remove the bracket from the product and drill two mounting holes in the wall spaced apart (see Figure A).

 


Step 1

Screw the bracket to the mounting holes on the wall with the screws in the accessories.



Install the speaker on the bracket, adjust it to your desired angle and tighten the screw.



English/



Support Information ,

We simply act as UK representative for cross-border sellers, and are not manufacturers/importers/distributors for the product, nor involved in the



EU REP SUCCESS COURIER SL CALLE RIO TORMES NUM.1, PLANTA 1, DERECHA , OFICINA 3,Fuenlabrada, Madrid, 28947 Spain

OST EU 20230424000022 successservice2@hotmail.com We simply act as EU representative for cross-border sellers, and are not manufacturers/importers/distributors for the product, nor involved in the

2. Find your order in the list. Select Problem with order.

> manufacture/import/sale of the product. Therefore, we are not responsible for any after-sales services related to

> the product. In case of any product quality or infringement issues, the manufacturer/importer/seller shall be solely held responsible.

manufacture/import/sale of the product. Therefore, we are not responsible for any after-sales services related to the product. In case of any product quality or infringement issues, the manufacturer/importer/seller shall be solely held responsible.

4. Choose your topic from list displayed. Select Contact seller.

English/

UK REP GOAL REACH CONSULTING LTD OFFICE 1029 3 HARDMAN STREET 10TH FLOOR, SPINNINGFIELDS MANCHESTER,