
Inwa

管,以备日后查阅

浴室防水音箱 使用说明书

使用前请仔细阅读说明书,并严格按说明书要求使用,阅读后请妥善保

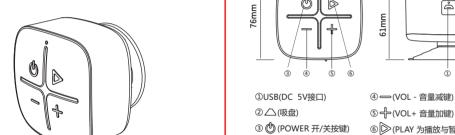

*可吸附在玻璃、瓷砖、镜子、手机等光滑表面。

产品描述

⑤ 🕂 (VOL+ 音量加键)

76mm

⑥ ○ (PLAY 为播放与暂停键)

3.产品外置锂电池,请避开直射光线或发热器具。

说明书 X1 USB线 X1

2.请勿严重撞击产品,避免损坏产品。

4.请勿自行拆卸、修理、改造产品。

产品规格

■ 产品型号: MZ-513

■ 蓝牙版本: Bluetooth 5.0

■ 无线距离: 15m Max

■ 电池容量: 650mAh

注意事项

1.请使用5V的话配器充电。

5.请勿靠近磁场、电场。

■ 额定功率: 5W

包装清单

■ 防水等级: IP65

■ 播放时间: 10小时(默认音量为60%)

■ 蓝牙名称: A SPEAKER03

■ 电源供应: DC 3.7V

■ 产品尺寸: 76×76×61mm

■ 产品净重: 134q(含电池)

操作说明

按键

指示灯

蓝色

长按2秒: 开启/退出蓝牙配对状态

单按: 暂停/播放 接/打电话

等待连接为快闪,连接成功为长亮

播放为慢闪, 暂停为长亮, 回联与

长按2秒: 开/关机

说明

说明

*蓝牙状态开机自动回联, 无连接10分钟关机

配对为快闪

充电时长亮, 充满时灭

单按: 下一曲 长按: 音量加

单按: 上一曲 长按: 音量减

1.标识电池电量不足,请充满再试。

设备有障碍物。

其他蓝牙设备。

2.电池电压低请充电。

解决方法

2.周边蓝牙设备太多,造成搜索困难,关闭 其他蓝牙设备。

3.检查产品是否处于搜索状态,或重新开机。

听音, 以免损害您的听力。

蓝牙状态指

灯不亮

常见问题解决方法

故障描述

多次连接配对

声音小或失真

音乐出现断音

1.检查产品是否处于搜索状态,或重新开机。

2.周边蓝牙设备太多,造成搜索困难,关闭

1.检测蓝牙设备音量,调节其音量至合适位置。

1.是否超出音响有效连接距离,或音箱与蓝牙

为有利于延长音箱使用寿命和您的身心健康,请不要在长时间大音量的环境下

故障描述

购买日期

用户姓名

电子邮件

维修日期

保修卡

用户地址

保修记录

用户姓名

维修人员签字


深圳市民展科技开发有限公司

Shenzhen Innosystem Technology Ltd. 地址:深圳市南山区科技园深圳软件园一期3栋2楼 电话: 0755-26995855 网址: www.innosystemtech.com

关注民展科技公众号

Inwa

BATHROOM WATERPROOF SPEAKER USER'S MANUAL

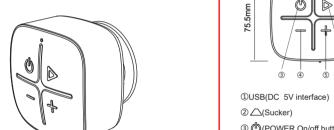

Please read the manual carefully before use and use it in strict accordance with the requirements of the manual. After reading,

please keep it properly for future reference.

phones, etc.

* Can be adsorbed on smooth surfaces such as glass, tiles, mirrors, mobile

Product specification

Model: MZ-513

IP Rating: IP65

Packing list

Precautions

Bluetooth name: A SPEAKER03 Frequency response: 20Hz-20KHz

Playback time: 60% volume for 10 hours

Net weight: 134g(including battery) Battery capacity: 650mAh Size: 76×76×61mm

USB cable x1

minutes off

Single press: next long Press: volume plus

connect back and match to flash.

*Bluetooth status, power on, auto connect back, no connection, 10

Long press for 2 seconds: on/off

 Whether it is beyond the effective connection distance of the audio, or there is an obstacle

> between the speaker and the Bluetooth device. 1. The battery is low. Please fill it up and try again. 2. There are too many Bluetooth devices around.

2. There are too many Bluetooth devices around,

Check the volume of Bluetooth device and

2. Please charge if the battery voltage is low.

adjust the volume to a proper position.

which makes it difficult to search. Turn off other

Bluetooth status indicator is Bluetooth devices. not on

Name Repair date Maintainer Fault description

Check whether the product is in search state

Distributor Name E-mail

Date of purchase

Warranty card

Warranty records

合格证

检验员Inspectors

Rated power: 5W

Instruction x1

Wireless distance: 15m Max

Single press: pause / play answer/call Long press for 2 seconds: turn Bluetooth pairing on/off

Operating instructions

Indicator light Explanation

Explanation

Wait for the connection to flash, connect successfully

Charging time is always on and off when fully charged.

to long light, play to slow flash, pause to long light,

Single press: last long Press: volume reduction

Music breaks

connection

pairing failed

Low or distorted

Solutions to common problems

or restart.

Bluetooth devices.

Fault description | Solution

which makes it difficult to search. Turn off other

3. Check whether the product is in search state or

certificate of quality

Product description



④ ─(VOL - Volume down key)

⑤ ☐ (VOL+ Volume up key)

(POWER On/off button) (PLAY is play and pause button)

2. Do not hit the product severely to avoid damaging the product.

Please use 5V adapter for charging.

3. The product has an external lithium battery, please avoid direct light or heating appliances.

4. Please do not disassemble, repair or modify the product by yourself.

Do not get close to magnetic fields and electric fields.