 


Inwa®

MZ-507 无线音箱

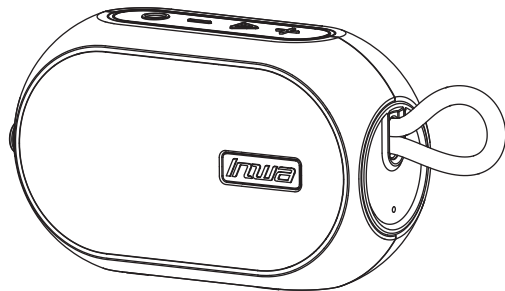

 
使用说明书

感谢您购买本产品。使用蓝牙音箱前，请阅读所有安全信息和操作说明。

安全须知

- 阅读所有说明，并保存起来以备日后参考。
- 请勿将其放置在热源附近。避免使用散热器，火炉和其他会发热的设备。避免长期暴露在阳光和高温下。
- 此音箱有2种模式：蓝牙模式和TF卡模式。
- 请注意：当蓝牙断开10分钟后，音箱将进入休眠关机。要重新启动音箱，请按电源开关/模式按钮。


包装内容

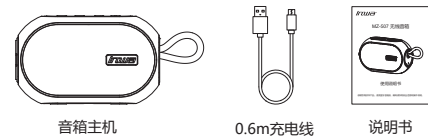

产品参数

- 工作时长：7hr
- 待机时长：≥300hr
- 蓝牙范围：≤10m
- 频率响应：20Hz-20KHz
- 蓝牙版本：V5.1
- 充电时长：5hr
- 工作电压：DC 5V 1A
- 额定功率：8W
- 防水等级：IP66
- 电池容量：1800mAh
- 产品尺寸：113*68*43mm
- 产品净重：192g(含电池)

 产品描述

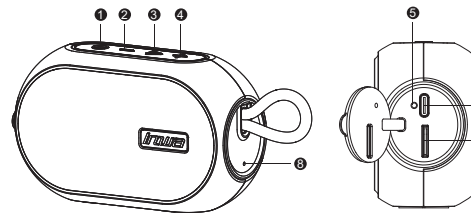

- ① 电源开关/模式：关机状态长按2秒开机；开机状态长按3秒关机；开机状态短按按钮切换模式。
- ② 降低音量/上一曲：长按按钮音量减。短按按钮上一首（蓝牙模式和TF卡模式下有效）。
- ③ 播放暂停/配对：音箱在蓝牙连接状态，或TF卡模式下，短按按钮播放/暂停；音箱在蓝牙模式状态下，短按按钮2次强制断开当前连接，双击进入音箱TWS配对模式。
- ④ 增加音量/下一曲：长按按钮音量加。短按按钮下一首（蓝牙模式和TF卡模式下有效）。
- ⑤ 电源/充电指示灯（蓝/红灯）
- ⑥ 电源接口：DC 5V 1A
- ⑦ SD卡接口
- ⑧ 麦克风

充电提示

- 低电量时，音箱会发出提示音报警，您需为音箱进行充电。
- 充电时，红色指示灯常亮，充满电后红色指示灯熄灭。
- 建议对带锂电池产品如不使用时每三个月充一次电。

操作指令

- 步骤1
长按电源按钮“○”2秒，有开机提示音，开机后，电源指示灯（蓝灯）快闪，RGB紫白切换，音箱进入与手机蓝牙搜索配对状态；默认音量20%。

注意：
音箱插入SD卡时，开机优先进入蓝牙模式，此时短电源按钮“○”切换到SD模式，音箱即可播放SD卡的歌曲。

- 步骤2
打开手机或其他蓝牙设备上的蓝牙功能，然后搜索名为MZ-507的音箱。与音箱连接。

- 1.在手机上搜索MZ-507音箱；
- 2.连接MZ-507音箱；
- 3.选择通过MZ-507音箱播放音乐。

- 步骤3
配对成功后，会有提示音，蓝色指示灯将常亮，RGB紫白呼吸切换。

- 步骤4
在手机上播放音乐。播放音乐时，蓝色指示灯将慢闪，RGB紫白跳动切换；音乐暂停时，蓝色指示灯将常亮，RGB紫白呼吸切换。

- 步骤5
如何将音箱与新设备连接：
将音箱与设备连接时，您可以短按配对按钮“▶”2次切断当前连接并进入配对状态。然后，蓝色指示灯将快闪，RGB紫白切换，音箱就可以与新设备连接，蓝牙状态开机自动回连上次连接的设备，无连接10分钟关机。



蓝牙音箱连接记忆功能

- 如果设备蓝牙功能开启，打开音箱后，音箱将自动连接到最后一个配对设备。

蓝牙音箱通话功能

- 接听电话：当音箱与手机连接时，如果有来电，您可以短按播放暂停按钮“▶”即可接听。

- 挂断电话：当音箱与手机连接时，通话中您可以短按播放暂停按钮“▶”即可挂断。

- 拒绝通话：当音箱与手机连接时，来电时您可以长按播放暂停按钮“▶”拒绝来电。

TWS

TWS的连接方式：
打开两台音箱，同时长按两台音箱配对按钮“▶”进入TWS相互连接状态后发出“咚”进行TWS组队，当听到另一台音箱发出“咚”一声后表示组队成功并且蓝灯常亮为从机模式，然后再将另一台音箱与蓝牙设备连接播放音乐，下次开启音箱将会自动连接。

TF卡模式

- 插入TF卡后，音箱将进入TF卡模式，您可以短按电源按钮“○”进行模式切换。

- 在TF卡模式下，当播放音乐时，蓝色指示灯将慢闪，RGB紫白跳动切换；音乐暂停时，蓝色指示灯将常亮，RGB紫白呼吸切换。

注意事项

- 请阅读本说明并遵循本说明。
- 请在常温环境中存放和使用本产品。
- 请勿在近热源处使用本产品，如散热器、热风调节器、炉灶或其他产生热量的仪器(包括放大器)。
- 请勿堵塞音箱的开口处，勿将物体塞入音箱的通风口或槽隙中。
- 请勿丢弃，避免因跌落造成本产品损坏。
- 请使用音箱额定电压的电源充电器充电。
- 如果连接线与您的设备不匹配，请与销售商联系。
- 请将音箱调至合适音量，避免对您的听力造成损害。
- 无论设备因何原因损坏，都必须及时请专业维修人员修理，擅自拆卸将使保修失效。
- 如果电池更换不当会有爆炸危险，只能用同样类型或等效类型的电池来更换。
- 电池(电池包或者组合电池)不得暴露在诸如日照、火烤或类似过热环境中的警告。

保修卡

产品型号	购买日期
经销商	用户姓名
联系电话	电子邮件
用户地址	

保修记录


用户姓名	故障描述	维修日期	维修人员签字

合格证

日期：_____
检验员：_____

Inwa®

 MZ-507 Wireless Speaker

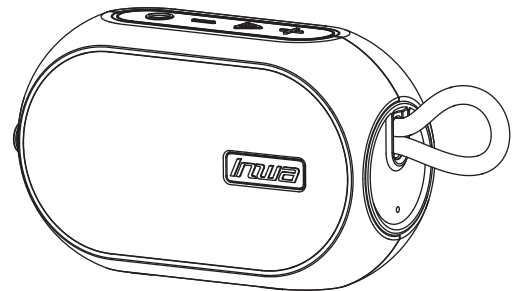


User's Manual

Thank you for purchasing this product. Please read all safety information and operating instructions before using the Bluetooth speaker.

Safety Instructions

- Read all instructions and save them for future reference.
- Do not place it near heat sources. Avoid radiators, stoves, and other appliances that generate heat. Avoid prolonged exposure to sunlight and high temperatures.
- This speaker has 2 modes: Bluetooth mode and TF card mode.
- Please note: When the bluetooth is disconnected for 10 minutes, the speaker will go to sleep and shut down. To restart the speaker, press the power switch/mode button.

 
Package Contents

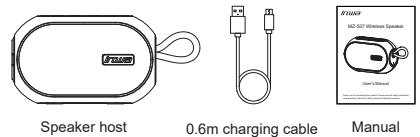

Product Parameters

- Working time: 7hr
- Standby time: ≥300hr
- Bluetooth range: ≤10m
- Frequency response: 20Hz-20KHz
- Bluetooth version: V5.1
- Charging time: 5hr
- Working voltage: DC 5V 1A
- Rated power: 8W
- Waterproof grade: IP66
- Battery capacity: 1800mAh
- Product size: 113*68*43mm
- Product Weight: 192g(with battery)

 Product Description

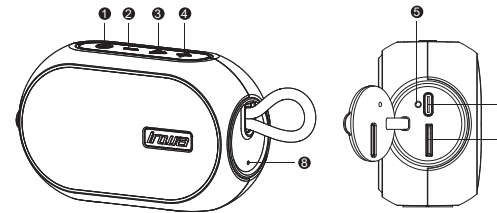

- ① : Power switch/mode: press and hold for 2 seconds to turn on in off state; long press for 3 seconds to turn off in power-on state; short press the button to switch modes in power-on state.
- ② : Volume down/Previous song: Long press the volume down button. Short press the button to play the previous song (valid in Bluetooth mode and TF card mode).
- ③ : Play pause/pairing: When the speaker is in Bluetooth connection state, or in TF card mode, short press the button to play/pause; when the speaker is in Bluetooth mode, short press the button twice to forcibly disconnect the current connection, and double-click to enter the speaker TWS pairing mode.
- ④ : Volume up/Next track: Long press the volume up button. Short press the button to play the next song (valid in Bluetooth mode and TF card mode).
- ⑤ Power/charging indicator (blue/red)
- ⑥ Power interface: DC 5V 1A
- ⑦ SD card interface
- ⑧ Microphone

操作指令

- Step 1
Press and hold the power button " " for 2 seconds, there will be a boot sound, after booting, the power indicator (blue light) flashes quickly, the RGB is switched between purple and white, and the speaker enters the Bluetooth search pairing state with the mobile phone; the default volume is 20%.

Notice:

When the speaker is inserted into the SD card, it will enter the Bluetooth mode first when it is turned on. At this time, short the power button " " to switch to the SD mode, and the speaker can play the songs of the SD card.

• Step 2

Turn on the Bluetooth function on your phone or other Bluetooth device and search for the speaker named MZ-507. Connect to speakers.

 
1. Search for MZ-507 speakers on your phone;
2. Connect MZ-507 speakers;
3. Choose to play music through MZ-507 speakers.

• Step 3

After the pairing is successful, there will be a prompt tone, the blue indicator will be always on, and the RGB will switch between purple and white breathing.

• Step 4


Play music on your phone. When playing music, the blue indicator light will flash slowly, and the RGB will switch between purple and white.

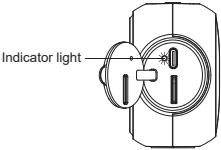

• Step 5

How to connect the speakers to the new device:

 When connecting the speaker to the device, short press the pairing button " " for 2 times to cut off the current connection and enter the pairing state. Then, the blue indicator light will flash quickly, the RGB will switch between purple and white, and the speaker can be connected to the new device. The Bluetooth status will automatically reconnect to the last connected device when it is turned on, and it will shut down if it is not connected for 10 minutes.



Bluetooth Speaker Connection Memory Function

 
- If the device's Bluetooth function is turned on, after turning on the speaker, the speaker will automatically connect to the last paired device.

Bluetooth Speaker Call Function

- Answer the call: When the speaker is connected to the mobile phone, if there is an incoming call, you can short press the play pause button " " to answer.

- Hang up the call: When the speaker is connected to the mobile phone, you can short press the play pause button " " to hang up during the call.

- Reject the call: When the speaker is connected to the mobile phone, you can long press the play pause button " " to reject the call.



Charging Tips

- When the battery is low, the speaker will sound an alarm, and you need to charge the speaker.
- When charging, the red indicator light is always on, and the red indicator light is off when fully charged.
- It is recommended to charge the product with lithium battery once every three months if not in use.

 
TWS

TWS connection method:

Turn on the two speakers, press and hold the pairing button " " of the two speakers at the same time to enter the TWS interconnected state and send out a "dong" to form a TWS team. The light is always on for slave mode, and then connect another speaker to the Bluetooth device to play music. The next time you turn on the speaker, it will automatically connect.

Tf Card Mode

- After inserting the TF card, the speaker will enter the TF card mode, you can short press the power button " " to switch the mode.
- In TF card mode, when playing music, the blue indicator light will flash slowly, and the RGB will switch between purple and white.



UK	REP	GOAL REACH CONSULTING LTD OFFICE 1029 3 HARDMAN STREET 10TH FLOOR, SPINNINGFIELDS MANCHESTER, UK M3 3HF
----	-----	--

OST UK 20230424000006 goalservice@hotmail.com

We simply act as UK representative for cross-border sellers, and are not manufacturers/importers/distributors for the product, nor involved in the manufacture/import/sale of the product.

Therefore, we are not responsible for any after-sales services related to the product. In case of any product quality or infringement issues, the manufacturer/importer/seller shall be solely held responsible.

EU	REP	SUCCESS COURIER SL CALLE RIO TORMES NUM.1, PLANTA 1, DERECHA, OFICINA 3, Fuenlabrada, Madrid, 28947 Spain
----	-----	--

OST_EU_20230424000022 successservice2@hotmail.com

We simply act as EU representative for cross-border sellers, and are not manufacturers/importers/distributors for the product, nor involved in the manufacture/import/sale of the product.

Therefore, we are not responsible for any after-sales services related to the product. In case of any product quality or infringement issues, the manufacturer/importer/seller shall be solely held responsible.