 


MZ-518 迷你复古音箱

使用说明书

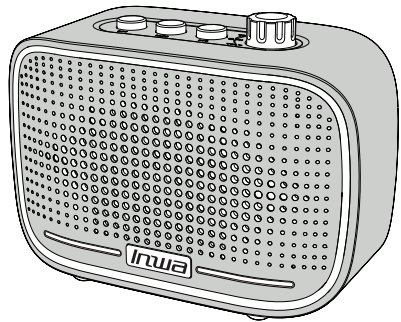

使用指南

感谢您购买这款产品。

 
使用本产品前，请阅读所有安全信息和操作说明。

安全说明

- 阅读所有说明并保存以备将来参考。
- 请遵循产品操作的所有说明。
- 不要在热源附近使用。避开散热器、炉子和其他产生热量的设备。避免长期暴露在阳光和高温下。
- 此扬声器有2种模式：蓝牙模式，音频模式。
- 请注意：如果在打开电源后3分钟未连接扬声器，扬声器将关闭电源。要重新启动扬声器，请按电源开/关。

1

产品组件

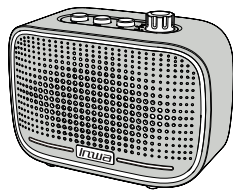

扬声器 * 1

 


USB数据线 * 1
(0.6m/23.62in)




3.5mm音频线 * 1
(1m/39.37in)

产品尺寸

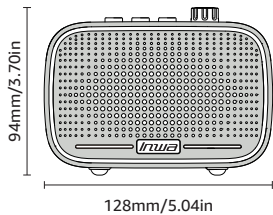


2

 

产品参数

播放时长	8hr-12hr
频率响应	20HZ-20KHZ
蓝牙范围	≤15m
额定电压	3.7V
额定功率	5W
电池容量	1500mAh
蓝牙版本	Bluetooth 5.0
产品净重	260g(含电池)
产品尺寸	128×60×94mm

 产品参数

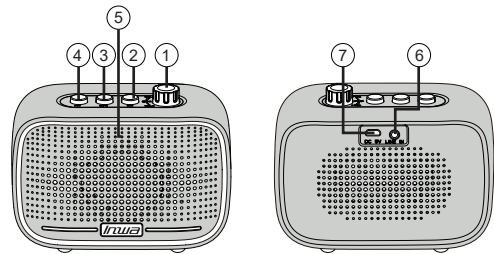


3

- ① 电源开/关/播放/暂停/音量调高/调低：
长按按钮可以打开/关闭扬声器；
短按按钮可以在蓝牙模式下播放/暂停音乐；
顺时针旋转按钮增加音量，或逆时针旋转按钮降低音量。
- ② **▶▶** 下一首：切换到下一首歌曲（仅适用于蓝牙模式）。
- ③ **M/✳** 模式/配对：
短按按钮更改音乐模式；
在蓝牙模式下，按住按钮2秒可断开与当前设备的连接，并进入等待配对的状态。
- ④ **◀◀** 上一首：切换到上一首歌曲（仅适用于蓝牙模式）。
- ⑤ 电源指示灯：蓝牙连接成功为长亮，蓝牙播放状态为慢闪，回联与配对状态为快闪，AUX时为慢闪。
- ⑥ AUX输入 ⑦ 电源接口：DC 5V 1A

操作说明

 步骤一：
长按电源按钮2秒，听到开机提示音。开机后，电源指示灯快速闪烁，说明扬声器已进入蓝牙配对模式。

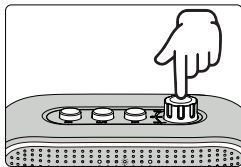


注意：当扬声器通过AUX音频线连接时，打开电源后，扬声器将自动进入AUX模式。短按模式/配对按钮切换到蓝牙模式。

4


合格证

检验员

 
步骤二：
按下模式/配对按钮2秒以断开当前连接，然后再次进入配对模式，电源指示灯也会快速闪烁。

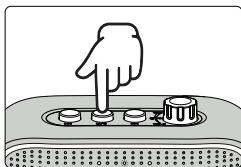

 步骤三：
在手机上搜索蓝牙设备“A SPEAKER05”，然后点击该设备将扬声器与手机配对。

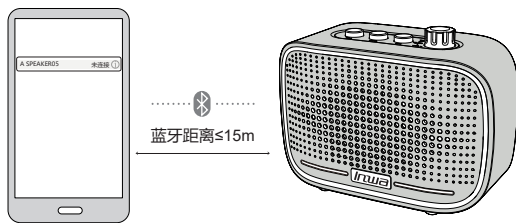


步骤四：
配对完成后，会有提示音，电源指示灯（蓝灯）长亮。

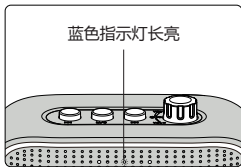 

5

 步骤五：
播放音乐时，电源指示灯（蓝灯）缓慢闪烁。


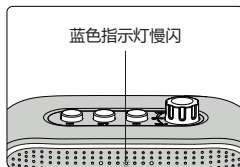


自动回连

打开扬声器电源后，它将自动重新连接到最后配对的设备。如果打开电源后未连接扬声器，扬声器将在3分钟后自动关闭。


AUX模式

  1.将3.5mm的音频线插入AUX模式，或短按模式/配对按钮切换AUX模式。

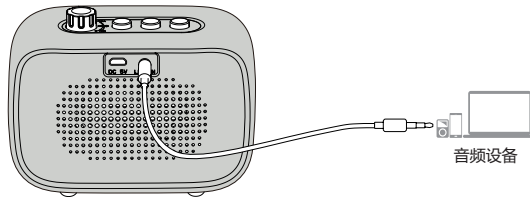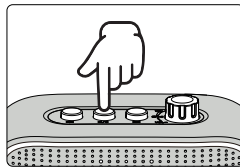


6

 2.在AUX模式下，电源指示灯（蓝灯）缓慢闪烁。

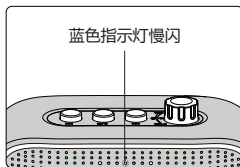


指示灯说明

 1.连接状态：
如果扬声器已准备好配对，则电源指示灯（蓝灯）快速闪烁。

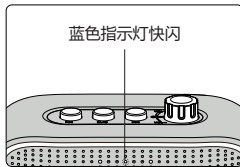


BT模式：扬声器已准备好连接

 如果扬声器正在播放音乐，则电源指示灯（蓝灯）缓慢闪烁。

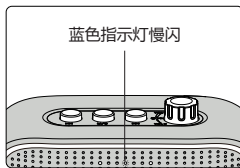


7

 2.充电状态：
如果电池电量不足，电源指示灯（红灯）缓慢闪烁，扬声器也会发出警报。

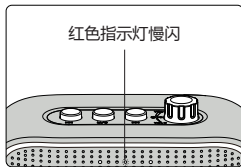


电池电量低时发出警报

 红色电源指示灯将在充电过程中长亮，充满电后自动熄灭。

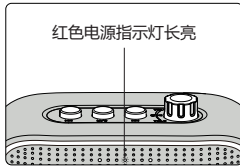

正在充电

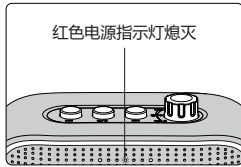 

充电完成

8

常见问题解决方法

故障描述	解决方法
多次连接配对不成功	1.检查扬声器是否处于搜索状态，或重新开机。 2.周边蓝牙设备太多，造成搜索困难，关闭其他蓝牙设备。
声音小或失真	1.检测蓝牙设备音量，调节其音量至合适位置。 2.电池电压低，请充电。
音乐出现断音	1.是否超出扬声器有效连接距离，或扬声器与蓝牙设备有障碍物。
蓝牙状态指示灯不亮	1.电池电量是否不足，请充满再试。 2.周边蓝牙设备太多，造成搜索困难，关闭其他蓝牙设备。 3.检查扬声器是否处于搜索状态，或重新开机。

温馨提示：
为有利于延长扬声器使用寿命和您的身心健康，请不要在长时间大音量的环境下听音，以免损害您的听力。

9

保修卡

产品型号	购买日期
经销商	用户姓名
联系电话	电子邮件
用户地址	


保修记录

用户姓名	故障描述	维修日期	维修人员签字

10

MZ-518 Mini Retro Speaker

 User's manual

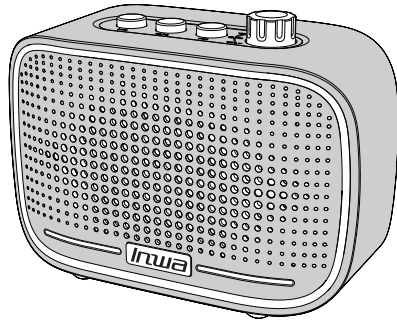


User's Guidance

Thank you for purchasing this product.
Before using this product, please read all safety
information and operating instructions.


Safety Instructions

- Read all instructions and save them for future reference.
- Please follow all instructions for product operation.
- Do not use near heat sources. Avoid radiators, stoves, and other devices that generate heat. Avoid long-term exposure to sunlight and high temperature.
- This speaker has 2 modes: Bluetooth mode and audio mode.
- Note: If the speaker is not connected for 3 minutes after turning on the power, the speaker will power off. To restart the speaker, press power on/off.

 Packing list

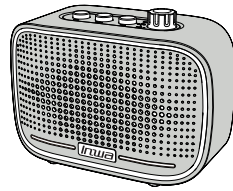

Speaker * 1

 


USB data cable * 1
(0.6m/23.62in)




3.5mm audio cable * 1
(1m/39.37in)

 Product Size

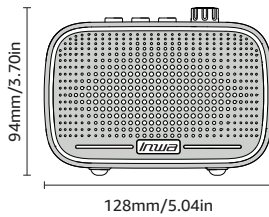

128mm/5.04in

 


60mm/2.36in

Product Parameter

Play time	8hr-12hr
Frequency response	20HZ-20KHZ
Bluetooth range	≤15m
Rated voltage	3.7V
Rated power	5W
Battery capacity	1500mAh
Bluetooth version	5.0
Net weight	260g(With battery)
Product size	128×60×94mm

 
Product Description

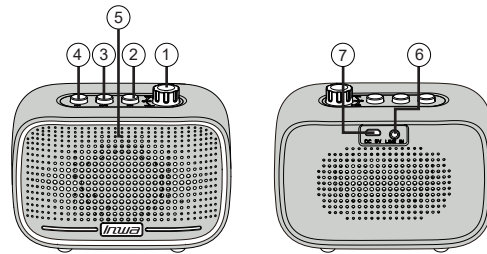

- Power on/off/play/pause/volume up/down:
Long press the button to turn on/off the speaker;
Short press the button to play/pause music in Bluetooth mode;
Turn the button clockwise to increase the volume, or turn the button counterclockwise to decrease the volume.
- Next: Switch to the next song (only available for Bluetooth Mode).
- Mode/pairing:
Short press this button to change the music mode;
In Bluetooth mode, press and hold the button for 2 seconds to disconnect from the current device and enter the state of waiting for pairing.
- Previous: Switch to the previous song (only available for Bluetooth Mode).
- Power indicator: If Bluetooth is connected successfully, it will be on for a long time, the Bluetooth playing status will be slow flashing, the status of linking back and pairing will be fast flashing, and the status of aux will be slow flashing.
- AUX input
- Power interface: DC 5V 1A

Instructions

 Step 1
Press and hold the power button for 2 seconds, and you will hear a boot tone. After turning on, the power indicator flashes quickly, indicating that the speaker has entered Bluetooth pairing mode.

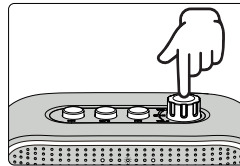


Certificate Of Quality

Inspectors

Note: When the speaker is connected with line in cable, the speaker will automatically enter AUX mode after powering ON. Press Mode button shortly to enter Bluetooth Mode.


Step 2

 Press the mode/pairing button for 2 seconds to disconnect the current connection, and then enter the pairing mode again, the indicator light will also flash.

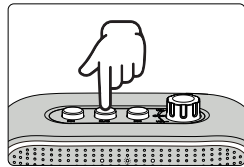


Step 3

 Search for the Bluetooth device "A SPEAKER05" on the phone, and then tap the device to pair the speaker with the phone.

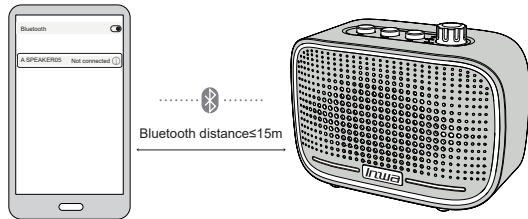


Step 4

 After the pairing is complete, there will be a beep and the power indicator (blue light) will be on.

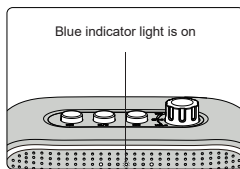

Step 5

 When playing music, the power indicator (blue light) flashes slowly.

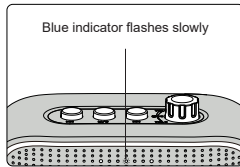


Automatically Connect Back


After turning on the speaker, it will automatically reconnect to the last paired device. If the speaker is not connected after turning on the power, the speaker will automatically turn off after 3 minutes.

AUX Mode

 
- Insert the 3.5mm audio cable into AUX mode, or short press the mode/pairing button to switch AUX mode.

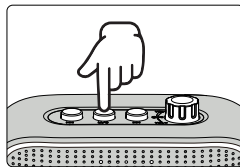

 - In AUX mode, the power indicator (blue light) flashes slowly.

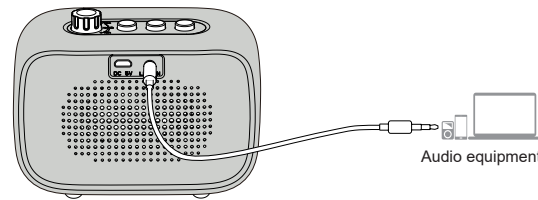


Audio equipment

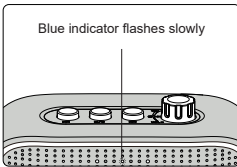 


Indicator Light Description

- Connection indicator:
If the speaker is ready to pair, the power indicator (blue light) flashes quickly.

 
BT mode:
The speaker is ready to connect.

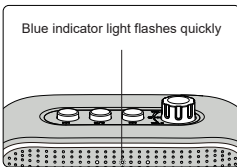

 If the speaker is playing music, the power indicator (blue light) flashes slowly.

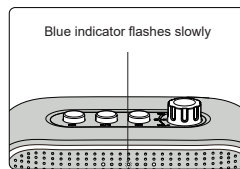


 - Charging indicator:
If the battery is low, the power indicator (red light) flashes slowly, and the speaker will also sound an alarm.

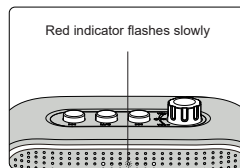


Alert when battery is low

 The red power indicator will stay on during the charging process, and will go out automatically when fully charged.

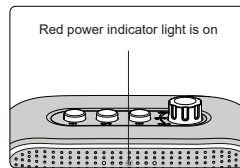

Charging

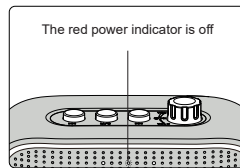 

finished charging

Solutions To Common Problems

Fault description	Solution
Multiple connection pairing failed	1. Check whether the product is in search state or restart. 2. There are too many Bluetooth devices around, which makes it difficult to search. Turn off other Bluetooth devices.
Low or distorted sound	1. Check the volume of Bluetooth device and adjust the volume to a proper position. 2. Please charge if the battery voltage is low.
Music breaks	1. Whether it is beyond the effective connection distance of the audio, or there is an obstacle between the speaker and the Bluetooth device.
Bluetooth status indicator is not on	1. The battery is low. Please fill it up and try again. 2. There are too many Bluetooth devices around, which makes it difficult to search. Turn off other Bluetooth devices. 3. Check whether the product is in search state or restart.

Tips:
In order to help prolong the service life of the speaker and your physical and mental health, please do not listen in a long-term high-volume environment to avoid damage to your hearing.

Warranty Card

Model	Date of purchase
Distributor	Name
TEL	E-mail
ADD	

Warranty Records

Name	Fault description	Repair date	Maintainer